



**Stainless Steel Series**

**2 in 1  
Steeping Kettle**

**Instruction Manual**



Thank You for your purchase

Register & sign up for special  
announcements and trendy recipes!

Tell us what you think!  
Rate, review or ask us a question.

@bellahousewares.com  
#getinspired



**BellaLife**



**BellaLifestyle**

Important Safeguards .....	4-5
Additional Important Safeguards .....	6
Notes on the Plug .....	6-7
Notes on the Cord .....	7
Plasticizer Warning .....	7
Electric Power .....	7
Getting to Know Your 2 in 1 Steeping Kettle .....	8
Safety Warnings .....	9
Before Using Your Kettle .....	9
Using Your 2 in 1 Steeping Kettle .....	9-10
Boil-Dry Protection .....	10
Cleaning And Maintenance .....	10
Warranty .....	11-12

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. **Read all instructions.**
2. Do not touch hot surfaces. Use handles or knobs only.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Close supervision is necessary when any appliance is used by or near children.
5. To minimize the risk of property damage, never place the 2 in 1 Steeping Kettle under cabinets. Make sure the area several feet above the 2 in 1 Steeping Kettle is clear from all furniture or cabinetry.
6. Do not open lid while water is boiling. Scalding may occur if the lid is removed during boiling
7. Do not use outdoors.
8. Unplug the 2 in 1 Steeping Kettle from the outlet when not in use and before cleaning. Allow the 2 in 1 Steeping Kettle to cool before putting on or taking off parts, and before cleaning the appliance.
9. To protect against fire, electrical shock and injury to persons, do not immerse cord, plugs, or appliance in water or other liquids.
10. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner.

Return appliance to the nearest authorized service facility for examination, repair or adjustment.

**NOTE: DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF.**

**THIS WILL VOID THE WARRANTY.**

11. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
12. Never move the appliance by pulling the cord. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
13. Stand the appliance on a table or flat surface.
14. Should you accidentally allow the 2 in 1 Steeping Kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the 2 in 1 Steeping Kettle to cool before filling with cold water and re-boiling.
15. While water is boiling, or just after the water has finished boiling, avoid contact with steam from the spout. To disconnect, turn any control to "OFF", then remove the plug from the wall outlet.
16. Always take care to pour boiling water slowly and carefully without tipping the 2 in 1 Steeping Kettle too fast.
17. Do not place appliance on or near a hot gas or electric burner or in a heated oven.
18. To reduce the risk of fire, do not mount unit over or near any portion of a heating or cooking appliance.
19. To reduce the risk of electric shock, do not mount over a sink.
20. To reduce the risk of fire, do not store anything directly on top of the appliance surface when the appliance is in operation.
21. Do not use this appliance for other than its intended use.

# FOR HOUSEHOLD USE ONLY

## ADDITIONAL IMPORTANT SAFEGUARDS

**WARNING:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Filling past the 'MAX' line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the 'MIN' line will result in the tea maker switching off before the water has boiled or reached the selected temperature.
4. **DO NOT** attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
5. Keep appliance at least 4 inches away from walls or other objects during operation.
6. Place the appliance on a surface that is resistant to heat.
7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water. Contact Consumer Service for examination and repair.

# SAVE THESE INSTRUCTIONS

## NOTES ON THE PLUG

This unit has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## NOTES ON THE CORD

The provided short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used,

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
3. The extension cord should be a grounded-type 3-wire cord if the appliance is of the grounded type.

## PLASTICIZER WARNING

**CAUTION:** To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.


## ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

## Getting to Know Your 2 in 1 Steeping Kettle

Product may vary slightly from illustration

1. Stainless Steel Steeping Filter Basket
2. Tea basket lid
3. Kettle Lid
4. Power base
5. Cord Storage concealed on the underside of the power base.
6. Glass Kettle
7. TEA TYPE button preset brew temperatures recommended for delicate, green, black, herbal tea.
8. KEEP WARM button keeps the brewed tea or heated water warm for up to 30 minutes.
9. Power button

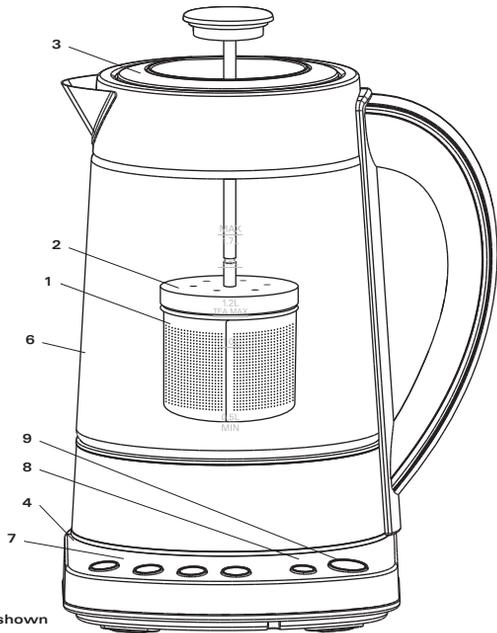

## Safety Warnings

- Proper precautions must be made to avoid burns from sprays of hot water or steam.
- Avoid touching any hot surfaces on the machine while the 2 in 1 Steeping Kettle is in use.

## Before Using Your Kettle

If you are using the 2 in 1 Steeping Kettle for the first time, it is recommended that you clean your 2 in 1 Steeping Kettle before use by boiling a full kettle of water twice and then discarding the water.

**NOTE:** The max capacity of the 2 in 1 Steeping Kettle is about 7 cups.

## Using Your 2 in 1 Steeping Kettle

1. To start the unit: Remove the Glass Kettle from the Power Base and remove Kettle Lid. When brewing tea, fill with desired amount of water. Ensure you do not fill past the maximum mark. Remove Basket Lid and fill the Basket with tea leaves. As a general guide, use 1 scoop of tea leaves per cup / 8oz / 250ml of water, however this will depend on the instructions on tea packaging and your personal preference. Press the Power button, the unit will Beep once and switch to standby mode. The indicator lights on the power button and the four temperature settings will turn on (160°F, 175°F, 195°F, 212°F)
2. To select temperature setting: press any preset temperature and the temperature indicator light will flash and the LED light ring will turn on indicating the water is heating to the selected temperature.
3. To select the keep warm function: press the KEEP WARM button and the indicator light will remain ON. The unit will begin the Keep warm function after the selected temperature is reached. During keep warm function the indicator light will remain on. The keep warm function period is 30 minutes. To turn off the cycle press KEEP WARM again. After the completion of the keep warm cycle, the unit will beep 3 times to alert the user the cycle has ended. The cycle is complete and the unit will shut off.
4. To turn off the unit:  
During operation, press the power button to stop the current mode, then the unit and all indicators light will turn off.

After the completion of heating and keep warm, the unit will shut off automatically and all indicators lights will shut off.

If there is no shut off operation within two minutes after turning the unit on, the unit and all indicators lights will automatically turn off.

**Note:** During keep warm mode, if the kettle is removed from base, and if the kettle is not placed back within one minute, the kettle will stop working and all indicators light will turn off. If the 2 in 1 Steeping Kettle is placed back within one minute, the unit will remain previous working state.

## **Boil-Dry Protection**

If you accidentally operate the 2 in 1 kettle without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the 2 in 1 kettle to cool before filling with cold water and re-boiling.

## **Cleaning And Maintenance**

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to come in contact with these parts.
2. Wipe the body of the kettle with a mild, damp cloth or cleaner, never use an abrasive cleaner.

**CAUTION:** Do not use chemicals, steel wool, wooden or abrasive cleaners to clean the outside of the kettle to prevent damage to the finish.

## Limited Two-Year Warranty

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

### Exclusions:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

### **How To Obtain Warranty Service:**

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.









**For customer service questions or comments**  
**1-866-832-4843**  
**[bellahousewares.com](http://bellahousewares.com)**

BELLA Pro Series is a registered trademark of Sensio Inc., Montreal, Canada H3B 3X9.  
All rights reserved.

SO-315574